 
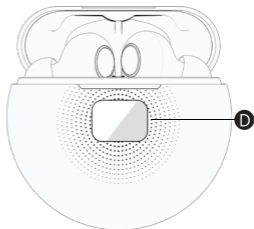 


A Z O M A Z O M A Z O M A Z O M A Z O M
O M A Z O M A Z O M A Z O M A Z O M A Z
A Z O M A Z O M A Z O M A Z O M A Z O M
O M A Z O M A Z O M A Z O M A Z O M A Z
A Z O M A Z O M A Z O M A Z O M A Z O M
O M A Z O M A Z O M A Z O M A Z O M A Z
A Z O M A Z O M A Z O M A Z O M A Z O M
O M A Z O M A Z O M A Z O M A Z O M A Z
A Z O M A Z O M A Z O M A Z O M A Z O M
O M A Z O M A Z O M A Z O M A Z O M A Z
A Z O M A Z O M A Z O M A Z O M A Z O M
O M A Z O M A Z O M A Z O M A Z O M A Z
A Z O M A Z O M A Z O M A Z O M A Z O M

 
START GUIDE

A Z O M BUDS

Appearance



- A. Charging Contactor
- B. Touching Area
- C. Microphone
- D. Digital LED Display
- E. Charging port

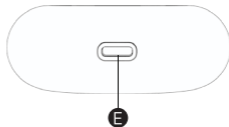

Product Specification

- Bluetooth Version: V5.1
- Stand-by time: ~120 days
- Talk time: ~4 hours
- Charging time: ~60 mins
- Battery capacity: 40 mAh
- Charging voltage: DC 5V
- Transmission distance: 10m - 15m
- Frequency Response: 20-20k Hz
- Charging case battery: 300 mAh
- Music playtime: ~6.5 hours

Packing List:

- Wireless earphones
- User manual
- Type-C charging cable
- Charging case

Products Use

If earphones lose pairing function, let earphones power on > Turn off the Bluetooth on the device > Double touch right earphone to get them paired manually.

1. Power on:

Open case, the earphone will power on automatically. Or manually press the button for 3 seconds. (If the charging box standby for a long time, it will default without power, but the earphones still with power, just press the earphones around 3 seconds, then it will power on).

2. Power off:

The earphone will power off when putting it into the charging case with lid closed. Or manually press the "power" button for 5 seconds to turn it off. (If earphone not connected, it will automatically power off after 3 minutes).

3. Bluetooth pairing:

After the earphones power on, will be in auto pairing mode. Open the device and find Bluetooth "Azom Buds" to connect and pair, it will pair successfully within 3 seconds with an indication sound to show it connected.

4. Charging indication:

When charging the charging case, the digital LED screen shows the power status.

5. Phone call mode:

When a call comes in, synchronize with the phone's ringtone, double click any earphone to answer the call, double click any earphone to hang up during the call. When a call comes in, Long press for 2 seconds on the right or left earphone to reject the call.

6. How to use the earphone?

- Single-touch Left or Right earphone: Play/Pause.
- Double-touch:
 1. Music Mode: Left earphone > skip back, Right earphone > skip forward.
 2. Left or Right earphone: Answer/Hang up.
- Triple-touch: Left earphone > volume down, Right earphone > volume up.
- Long press Reft or Right earphone 3 seconds: Activate Siri.

Safety Information

Before using and operating the earphones, please read and follow the below precautions to ensure the best performance of it and to avoid dangerous or illegal situations.

Electronic Devices:

- Do not use this device in the place where wireless devices are prohibited, otherwise it will interfere with other electronic devices or cause other dangers.

Medical equipment interference:

- In medical and health care places where the use of wireless devices is prohibited, please follow the rules and turn off the device.
- The radio waves generated by the device may affect the normal operation of implanted medical devices or personal medical devices, such as pacemakers, cochlear implants, hearing aids, etc. If you use these medical devices, please consult the manufacturer for restrictions on the use of this device.
- When using this device, please keep at least 15 cm away from implanted medical devices (such as pacemakers, cochlear implants, etc.)

Hearing Loss:

- Listening to sound at high volume may permanently damage your hearing.
When you use earphones to listen to music or calls, it is recommended to use the minimum volume required for music or calls to avoid hurting your hearing.
- Exposure to high-level volume while driving, May distract the driver's attention and cause accidents.

Operating Environment:

- Do not use the device in dusty, sharp, compact or near magnetic fields to avoid failure of the internal circuit of the device.
- When installing the device, please keep away from strong magnetic fields or electrical appliances with strong magnetic fields, such as ovens and refrigerators.
- Do not use the device in thunderstorm weather. Thunderstorm weather may cause equipment failure or electric shock hazard.
- Please use the device within a temperature range of -10 °C - + 55 °C, and store the device and its accessories within a temperature range of -40 °C - + 70 °C. When the ambient temperature is too high or too low, it may cause device function failure.
When the temperature is below 5 °C, the performance of the battery is limited.
- Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, candles, or other places that may generate high temperatures.
- Do not place sharp metal objects such as pins near the device's earpiece or Charging Case, otherwise the metal objects may adhere and cause injury to you.

Child health

- This device and its accessories may contain some small parts. Keep the device and its accessories in a place out of children's reach. Children may inadvertently damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.
- This device is not a toy, children should use this device under adult supervision.

Battery safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery leakage, fire or explosion.
- Do not drop, crush or puncture the battery case. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery. Do not replace the battery yourself to avoid damage to the battery or device. The battery can only be replaced by **AZOM** Customer Service Center.
- Please dispose batteries in accordance with local regulations. Do not dispose batteries as household waste. Improper disposal of the battery may cause the battery to explode.

Charger safety

- When charging the device, the power socket should be installed near the device and should be easily accessible.
- When charging is completed or not charging, disconnect the charger from the device and unplug the charger from the power outlet.

Environmental protection

- Do not dispose this device and its accessories as ordinary household garbage.
- Please abide by the local laws and regulations on the handling of this device and its accessories, and support recycling operations.

Precautions

1. The earphones should be stored in a dry/ventilated environment and avoid contacting with oil, water vapor, steam, moisture and dust to prevent performance failure of the product.
2. Avoid using harsh organic solvents or items containing these ingredients to clean the earphones.
3. The earphones should be used carefully according to the instructions mentioned in the user manual, with consideration of the effect of the surrounding environment on the product.
4. It is always recommended to keep the distance within 10 Meters between the earphones and the paired device to insure a smooth connection.
5. If the earphone failed to connect or with poorly connection, please do not dismantle them or the accessories to avoid losing the free warranty benefits.
6. When charging the earphones, please use the standard car charger or the charger specified by **AZOM** company.
7. To ensure the best performance of the earphones, please make sure they are fully charged.

Warranty Service

A. During normal use of this product, if the product has non-artificially damage performance failure. From the date of the purchase, consumers enjoy a free warranty period with 24 months.

B. In one of the following circumstances, consumers cannot enjoy the free warranty benefits:

1. Artificially damage.
2. Exceeds the warranty period.
3. Cannot provide valid proof of purchase.
4. Failure to use and maintain the product in accordance with the instructions.
5. Unauthorized, dismantle or repair the products privately or product was soaked.
6. Other damage caused by force majeure.

A Z O M

